TO SET Digi-Day™ SCOREBOARD COUNTER

.E

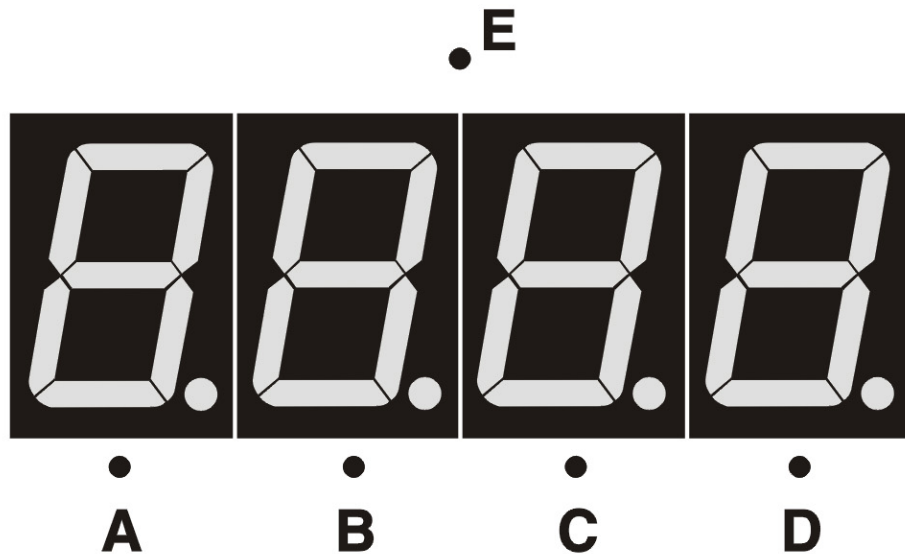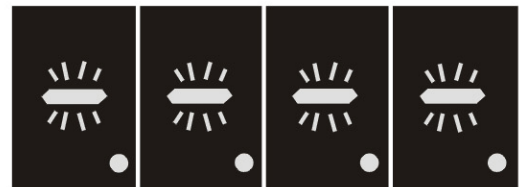**A   B   C   D**

1- Press and hold bottom left button (A) for 2 seconds until *center* dashes flash.

2- Press bottom buttons (A,B,C,D) until display reads all zero's. *Display will continue to flash.*

3 - Press top button (E) once quickly. *(All zero's will continue to flash).*

4 - Set display to desired number of days by pressing the bottom buttons (A,B,C or D,) under each digit *(All numbers will continue to flash).*

5 - Press top button (E) once more quickly, to lock-in the desired number of days. This will also start the 24 hour counter to advance display by one digit, daily.

TO RESET COUNTER, FOLLOW THE ABOVE PROCEDURE.